


BÜCE

Reclining Electric Shampoo Chair

User's Guide

BUCE S270 / BUCE S270F / BUCE S272 / BUCE S272F

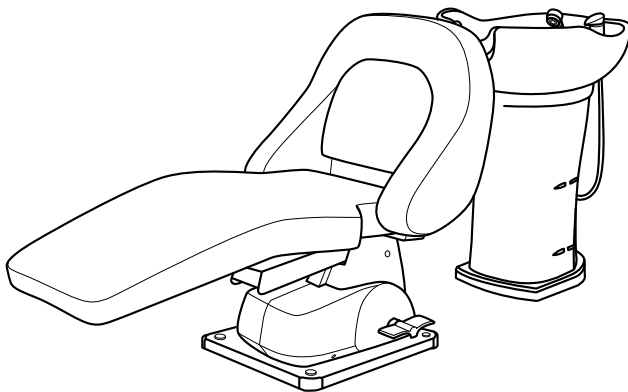

Model Name	BUCE S270 / BUCE S270F / BUCE S272 / BUCE S272F
Weight	Seat Part 65Kg Bowl Stand 21Kg
Dimension	1580 * 640 * 890(H)
Rated power consumption	220W
Rated voltage/ Frequency	AC 220V / 60Hz
Load Rating	MAX 150Kg

Thank you for purchasing BÜCE Backwash units.

For correct install and use, please read this instruction manual and warranty carefully before install and use.

Or it may cause the equipment to malfunction and shorten life time of the product.

Please contact your authorized dealer if you have any query on this the product in use.

Since installation work requires specialized skills, it must be installed at an installation specialist.

Problems arising from the installation work are the responsibility of the installer,
in which case no free service is provided.


Routine Check

- If the product emits strange noises, odors or smoke, unplug the power plug or turn off the main power switch.
 - An electric shock or fire may occur.
- Always remove moisture and chemicals after use, and use leather cleaner for periodic maintenance.
 - Longer use of the product is possible if you take good care of it.
- Periodically remove dirt and hair from the filter.
 - If the drain gets clogged, backflow may occur.
- Periodically dry the neck support.
 - Longer use of the product is possible if you take good care of it.
- After using the shower head, always fix it in place.
 - Water may drip onto the floor from the shower hose.
- Always keep the surroundings clean after the procedure.
 - Longer use of the product is possible if you take good care of it.

Safety Precautions

- The rated voltage of this product is 220 V 60 Hz.
Use after verifying that the rated voltage is correct.
 - Otherwise, malfunction or damage to parts may occur.
- Do not subject the product to severe impacts.
 - There is a risk of damage to the parts of the product.
- Do not arbitrarily disassemble or modify the product for use.
 - If the product breaks down, please contact the supplier or manufacturer.
- Maintain cleanliness when using the product.
 - Otherwise, failure may occur or the life of the parts may be shortened.
- As the product is heavy, at least two people must be present when unpacking or lifting and moving it.
 - Excessive use may damage the product or injure people.
- Be careful not to let children approach during the procedure.
 - This can lead to unexpected accidents.

Name of each part

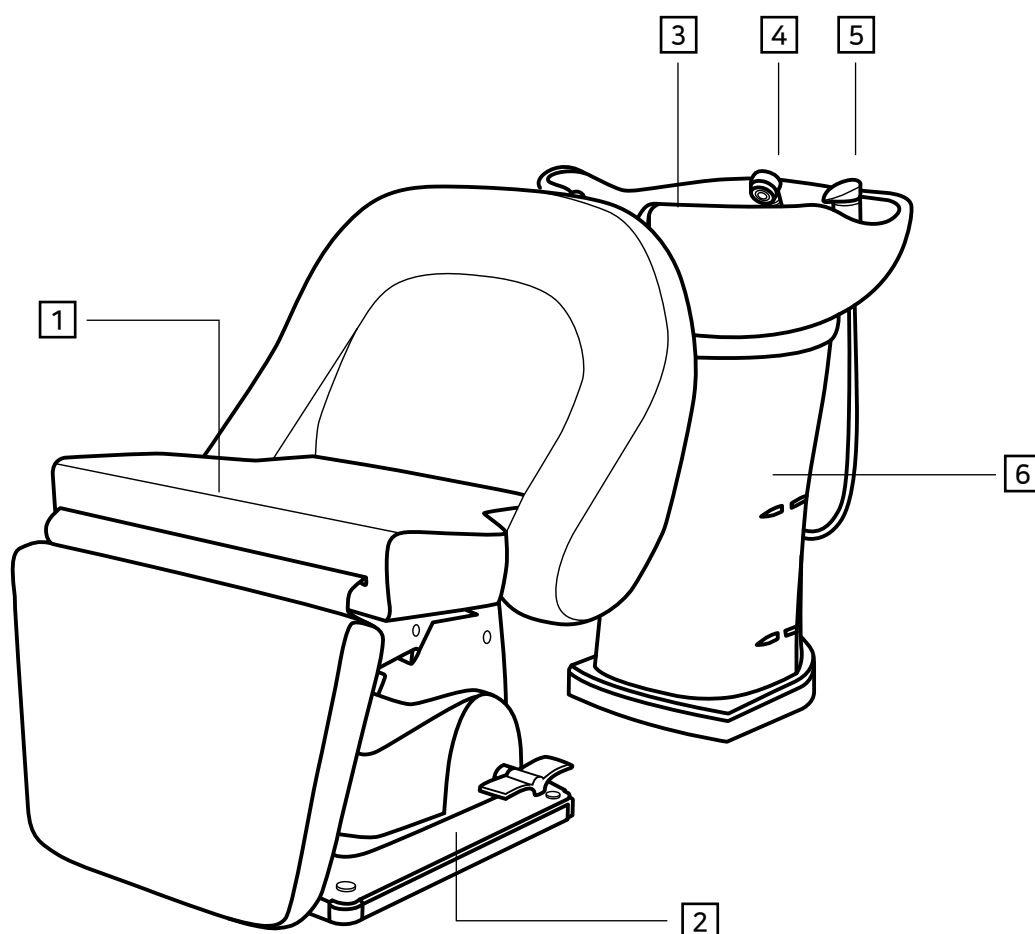

[1] Seat Part

[5] Faucet


[2] Electric Base Part

[6] Shampoo
Bowl Stand


[3] Ceramic Basin

[4] Shower Head

[7] Water Stopper

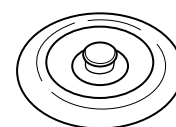


[8] Head & Neck Cushion

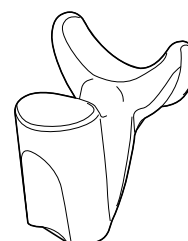

* The bolts required for assembly are fastened or packaged with the product.


Electric Seat Base and Shampoo Bowl Stand Base Assembly

01

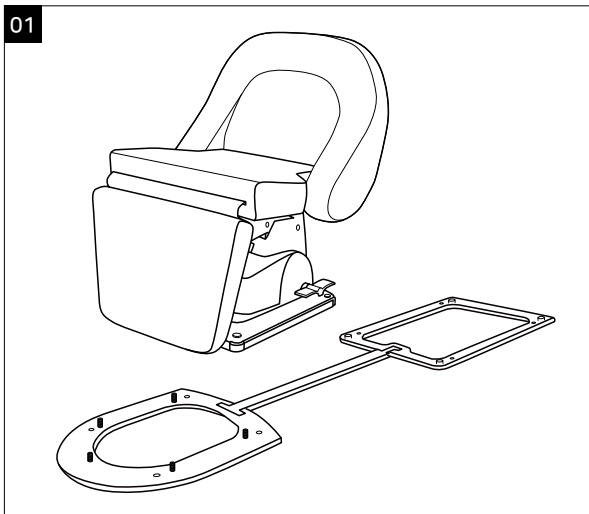


Prepare the packaged product as shown in the picture.

02

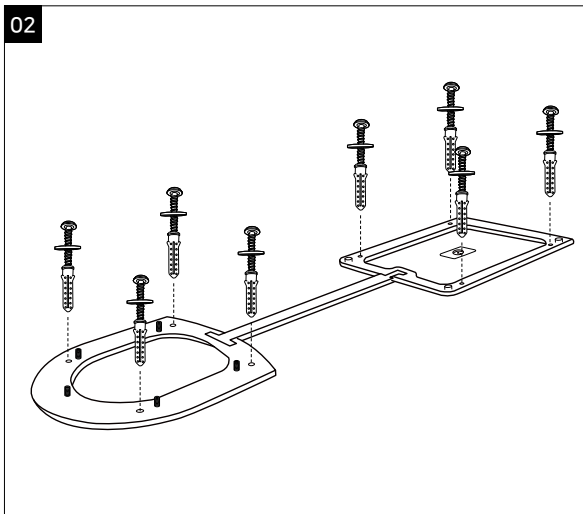


Secure the base of each part in position.

03

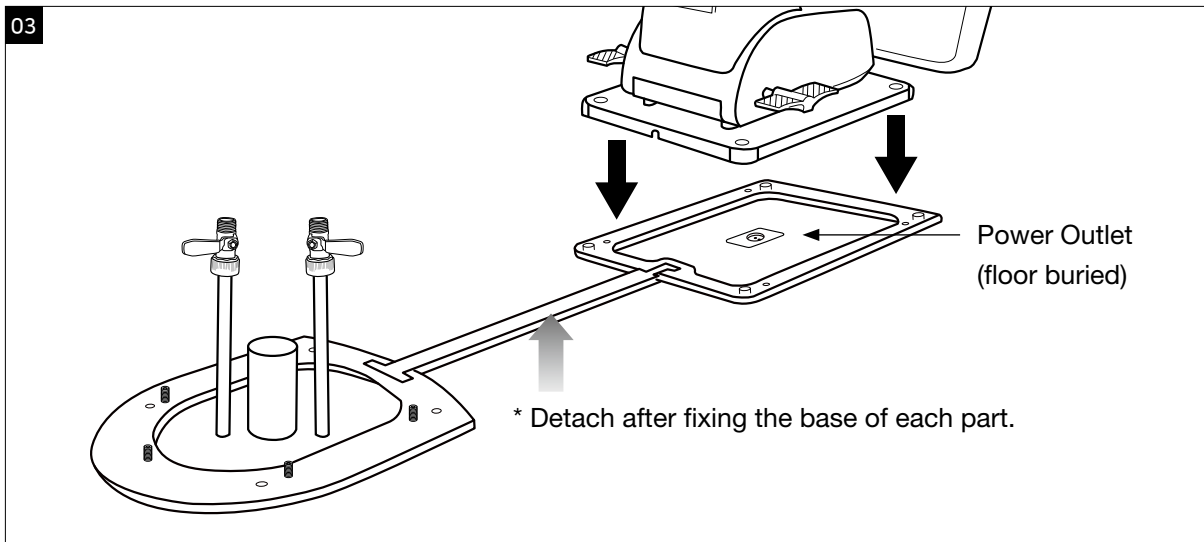


After connecting the power, fix the electric seat in place.

04

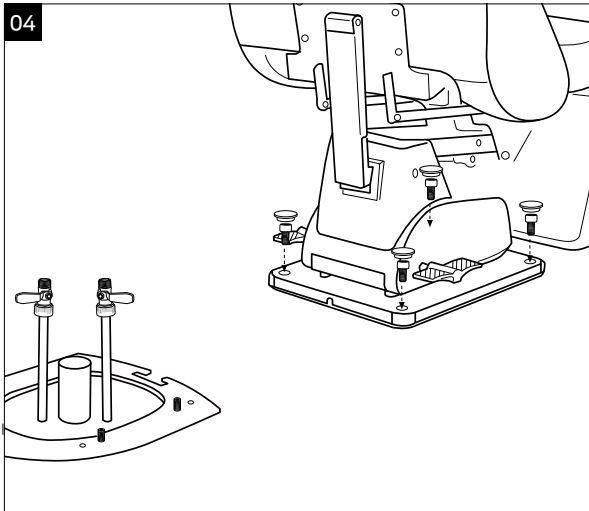

Fix the electric seat part with bolts and cover them with rubber caps.


05

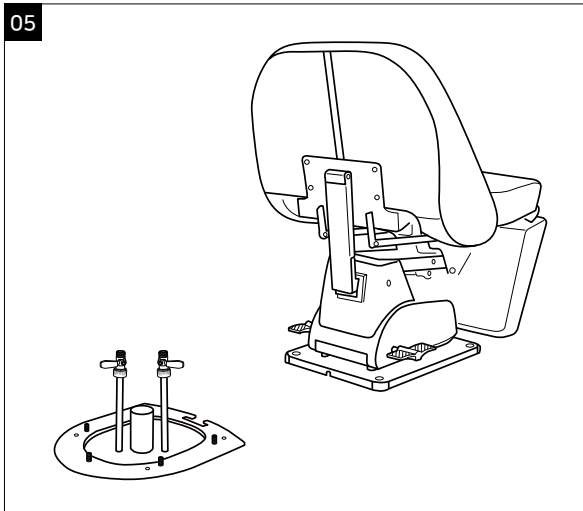

Complete


Shampoo Bowl Stand Assembly

01

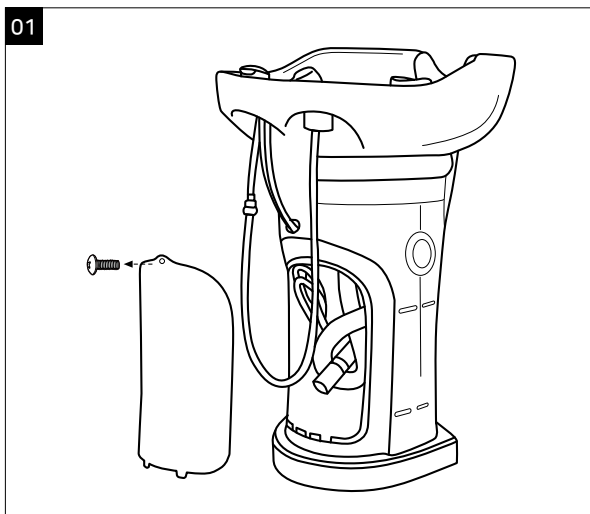


Unscrew the Shampoo bowl stand cover.

02

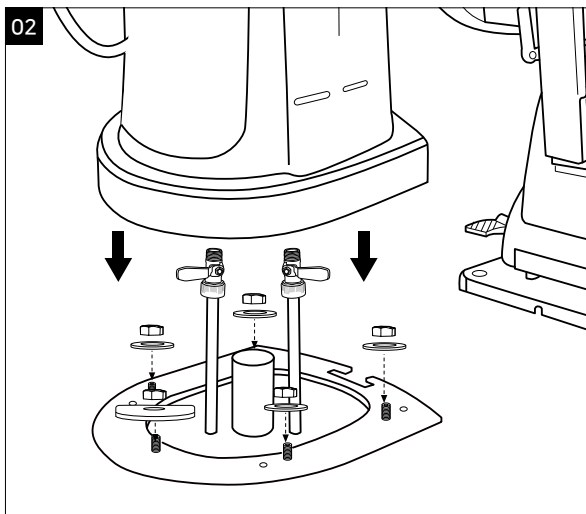

Affix the Shampoo bowl stand and tighten the nut.


03

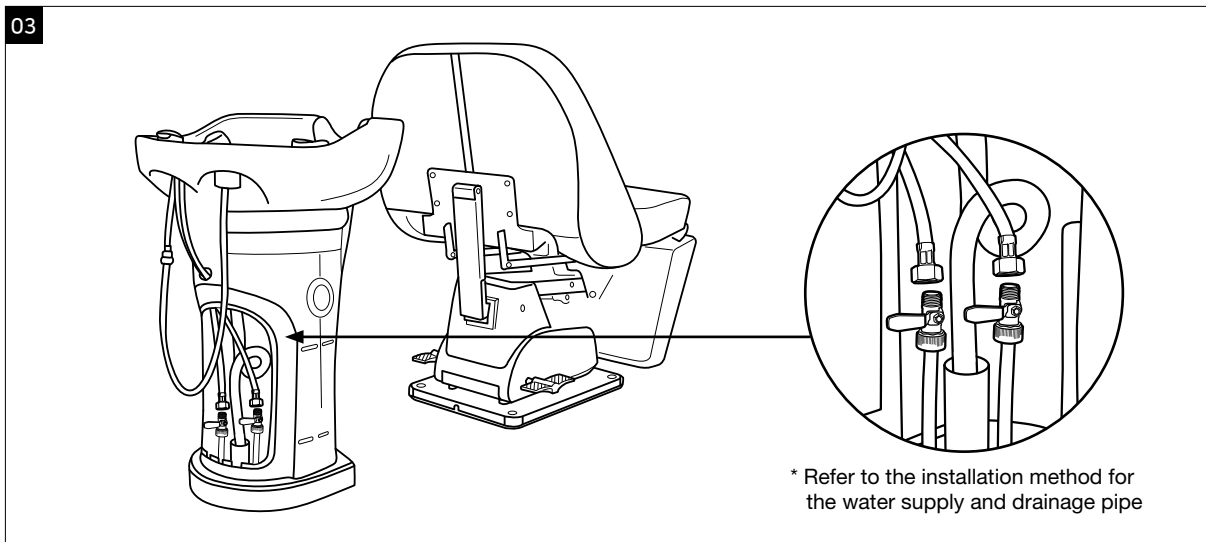

* Refer to the installation method for the water supply and drainage pipe

Connect the water supply and drainage.

04

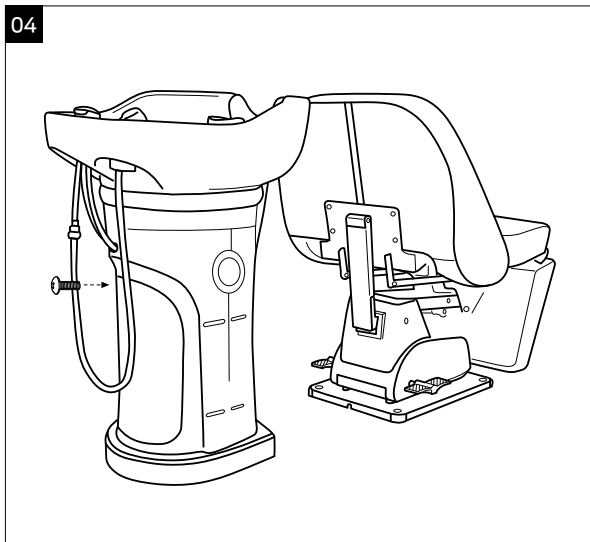


Fasten the Shampoo bowl stand cover.

05




Complete

How to Install the Water Supply & Drain Pipe

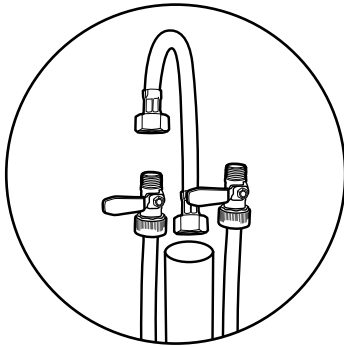

- Since the installation work requires professional skills, it must be installed by an installation specialist.
- Check the location of the water supply pipe and drain pipe before installation.
- Intermediate valves must be installed in the cold and hot water supply lines.
- Before connecting the water supply, drain the water through the drain pipe for at least 1 minute using a hose to remove foreign substances.

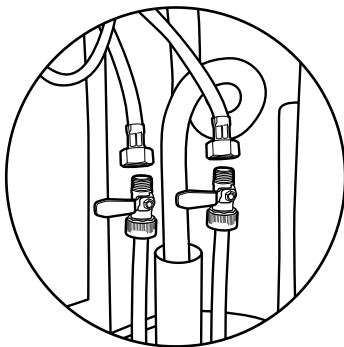



- Connect the water supply after checking that the cold water (blue) and hot water (red) are correct.
- The drainage hole is configured in a U-trap method to prevent odor.
- The connection between the drain and the drain pipe should be sealed to prevent odor.
- After connecting the water supply and drain pipes, run water for at least one minute to check for leaks.
- Check whether it is affected by the water pressure in the sink and toilet, etc.

Installation Method (Fixing to the Floor)




- Check whether the floor space where the product will be installed is suitable for fixing the product in place.
- Anchor the bottom of the seat part to the Shampoo bowl stand connection part to fix it in place.
- It is recommended that you use the product one or more days after the installation.

Installation Diagram

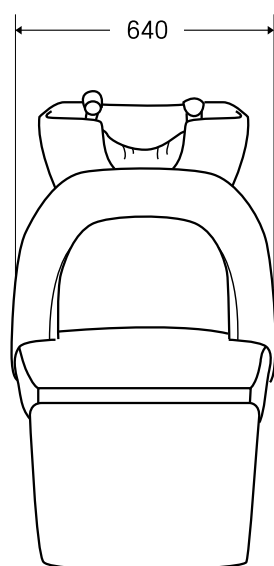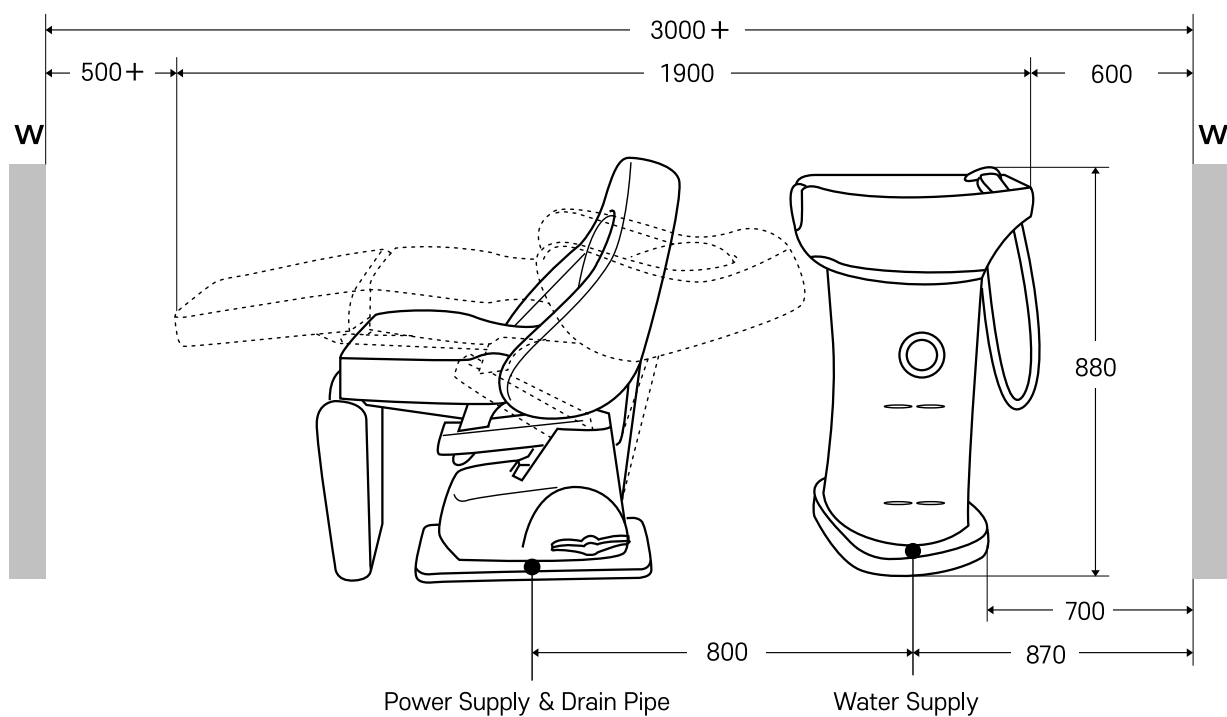

Water Supply & Drain Pipe
/ Power Supply

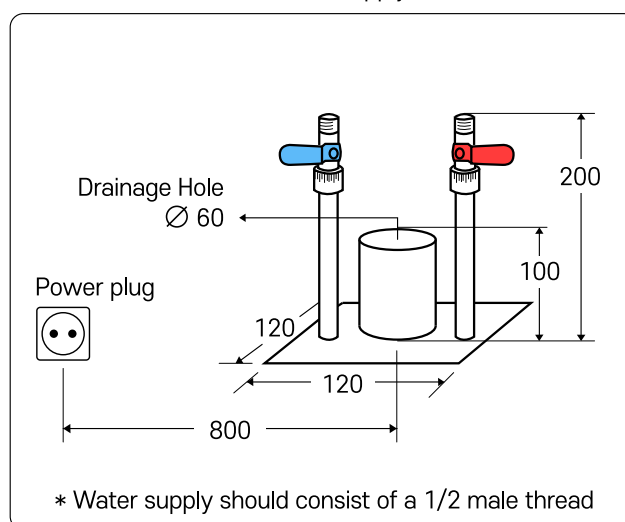

Product Warranty

Product Name	Reclining Electric Shampoo Chair
Model Name	
Place of purchase	
Purchase date	
Serial No.	
Warranty period	See warranty details

Warranty contents

One year from the date of purchase under the normal use.

Consumables standard

* Consumables are parts that are expected to wear out, change in appearance, or break with use, and they are as follows.

(Shower head, shower line, hot and cold water control valve, neck support, filter, water stopper, etc.)

* Please note that consumables are not covered under warranty and must be paid for.

(Depending on the environment and conditions of use, the degree of wear and timing of breakage will vary.)

Paid service

When applying for service, charges will apply in the following cases within the free period.

* In the case of product damage or deformation due to impact while moving or being dropped after purchase.

* In the case of user negligence and arbitrary changes in structure

* In the case of failure due to natural disasters (fire, flood, earthquake)

Beauty **U**tility by **C**reative **E**xpert

www.bdkorea.com



BD KOREA., Ltd.

20, Seounsandan-ro 8-gil, Gyeyang-gu, Incheon, 21072, KOREA
Tel : 82-32-676-2407 Fax : 82-32-675-8497 E-mail : info@bdkorea.com